

Attach red/black Yamaha lead (found in back of speaker) to the input at the back of the speaker

Connect to another jack lead (with the jack-jack adapter attached). Attach to the left 'Speakers' input on mixer

Yamaha Stagepas PA Setup

Click here for type of reverb and amount (e.g. 'plate'). Make sure the 'reverb on' button is down

Volume for

individual channels.

Don't make so loud

(causes distortion)

the lights go into 'red'

Click here for amount of reverb on the individual channel (use for vocals)

instruments (via DI box).

Ch 4 can take a jack lead from guitar (press down 'Hi-Z' button)

XLR inputs - from vocals or

Jack lead input (e.g. stereo from keys or mono - guitar etc)

OF MONO - guitar etc)

Martion out Burnoods

Martion out Burnoods

Martion out Burnoods

A District Street Street Tibe

REVEND STREET S

If using a 'condenser' mic or DI box, make sure 'Phantom Power' is on

Press down if you need channel to be mono (1 input). Press up if using 2 inputs.

Attach to jack adapter lead and into right 'Speaker input' on the mixer

'Monitor Out' for foldback

Phono input from laptop / iPad etc. to playback songs / audio

Power lead

Click down button to avoid feedback noise!

On / Off Switch

Master Volume